

## CHANNEL OPERATING FREQUENCIES

To change the operating frequency of a channel:

- 1 With the transceiver power OFF, press and hold the **PTT** switch and **Side 1** key while turning the transceiver power ON.
  - Continue to hold the **PTT** switch and **Side 1** key until the LED lights orange and the transceiver announces “Self”.
- 2 Release the **PTT** switch and **Side 1** key.
  - The transceiver announces “Channel”.
  - Pressing the **Side 1** key or **Side 2** key will toggle between QT, DQT, and Channel setup.
- 3 Press and release the **PTT** switch, then rotate the **Channel** selector to your desired channel.
  - Upon pressing and releasing the **PTT** switch, a beep will sound and the transceiver announces “Table zero”.
- 4 Press the **Side 1** or **Side 2** key to increment/ decrement the Table number, to select the new channel frequency.
  - Press and hold the **Side 1** or **Side 2** key to increment/ decrement the number by 5 at a time.
  - Table numbers and their corresponding operating frequencies are provided in the table on page 14.
  - A voice announcement will inform you of the currently selected Table number.
- 5 Press the **PTT** switch to save the setting.
  - A beep will sound.
  - Repeat steps 3 to 5 to set up another channel.
- 6 Turn the transceiver power OFF and then ON again to activate the new settings.

---

**Note:** The transceiver will automatically return to normal operation if no action is performed for 5 seconds.

---

<b>TK-2300 Table Number</b>	<b>Operating Frequency (MHz)</b>	<b>TK-2300 Table Number</b>	<b>Operating Frequency (MHz)</b>
0	OFF	14	151.7450
1	151.6250	15	151.7750
2	151.9550	16	151.8650
3	152.8850	17	151.8950
4	152.9150	18	151.9250
5	151.7000	19	152.7000
6	151.7600	20	154.4900
7	152.9450	21	154.5150
8	151.8350	22	154.5275
9	151.8050	23	154.5400
10	151.5125	24	153.0050
11	151.6550	25	154.6550
12	151.6850	26	158.4000
13	151.7150	27	158.4075

<b>TK-3300 Table Number</b>	<b>Operating Frequency (MHz)</b>	<b>TK-3300 Table Number</b>	<b>Operating Frequency (MHz)</b>
0	OFF	14	461.1625
1	464.5000	15	461.1875
2	464.5500	16	461.2125
3	467.7625	17	461.2375
4	467.8125	18	461.2625
5	467.8500	19	461.2875
6	467.8750	20	461.3125
7	467.9000	21	461.3375
8	467.9250	22	461.3625
9	461.0375	23	462.7625
10	461.0625	24	462.7875
11	461.0875	25	462.8125
12	461.1125	26	462.8375
13	461.1375	27	462.8625

<b>TK-3300 Table Number</b>	<b>Operating Frequency (MHz)</b>	<b>TK-3300 Table Number</b>	<b>Operating Frequency (MHz)</b>
<b>28</b>	462.8875	<b>59</b>	462.4875
<b>29</b>	462.9125	<b>60</b>	462.5125
<b>30</b>	464.4875	<b>61</b>	467.1875
<b>31</b>	464.5125	<b>62</b>	467.4625
<b>32</b>	464.5375	<b>63</b>	467.4875
<b>33</b>	464.5625	<b>64</b>	467.5125
<b>34</b>	466.0375	<b>65</b>	451.1875
<b>35</b>	466.0625	<b>66</b>	451.2375
<b>36</b>	466.0875	<b>67</b>	451.2875
<b>37</b>	466.1125	<b>68</b>	451.3375
<b>38</b>	466.1375	<b>69</b>	451.4375
<b>39</b>	466.1625	<b>70</b>	451.5375
<b>40</b>	466.1875	<b>71</b>	451.6375
<b>41</b>	466.2125	<b>72</b>	452.3125
<b>42</b>	466.2375	<b>73</b>	452.5375
<b>43</b>	466.2625	<b>74</b>	452.4125
<b>44</b>	466.2875	<b>75</b>	452.5125
<b>45</b>	466.3125	<b>76</b>	452.7625
<b>46</b>	466.3375	<b>77</b>	452.8625
<b>47</b>	466.3625	<b>78</b>	456.1875
<b>48</b>	467.7875	<b>79</b>	456.2375
<b>49</b>	467.8375	<b>80</b>	456.2875
<b>50</b>	467.8625	<b>81</b>	456.3375
<b>51</b>	467.8875	<b>82</b>	456.4375
<b>52</b>	467.9125	<b>83</b>	456.5375
<b>53</b>	469.4875	<b>84</b>	456.6375
<b>54</b>	469.5125	<b>85</b>	457.3125
<b>55</b>	469.5375	<b>86</b>	457.4125
<b>56</b>	469.5625	<b>87</b>	457.5125
<b>57</b>	462.1875	<b>88</b>	457.7625
<b>58</b>	462.4625	<b>89</b>	457.8625