
ALL RESET MODE

At some point in time, you may desire to reset the transceiver settings to their default values. This function will reset all channels to their default frequencies and QT/DQT, the VOX function to its default status, and all keys to their default functions.

To reset the transceiver:

- 1 With the transceiver power OFF, press and hold the **PTT** switch, the **Side 1** key, and the **Side 2** key while turning the transceiver power ON.
 - Continue to hold the keys for 2 seconds, until the LED lights orange.
- 2 Release the keys.
 - The keys must be released within 1 second after the LED lights orange, otherwise All Reset Mode will cancel.
 - The transceiver announces “Confirm” and returns to normal operation.

OPTIONAL ACCESSORIES

- KMC-21 (Speaker/ microphone)
- KMC-45 (Speaker/ microphone)
- KHS-1 (Headset)
- KHS-22 (Headset)
- KNB-45L (Li-ion battery pack)
- KSC-35 (Rapid charger)
- KSC-356 (Multiple charger)
- KBH-10 (Belt clip)
- KWR-1 (Water resistant bag)